


ELECTRONICS

You will need: Wireless remote (300951) and Multi-function board (305117, 305119, 305120, 305121)

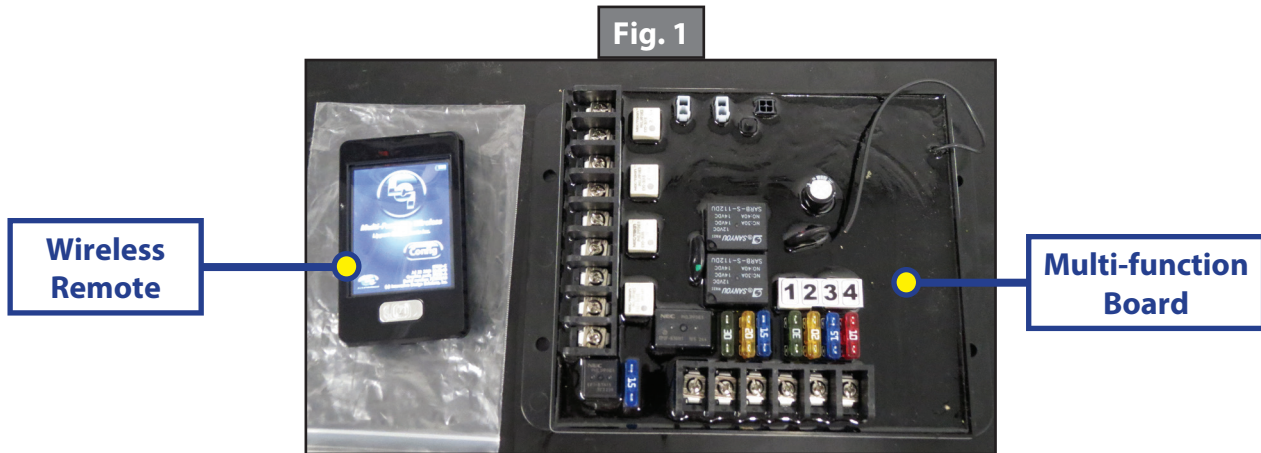


Entering configure mode on (handheld) remote

To assign titles to the functions to be used:

NOTE: Press and release Home button on remote control five (5) times to enter "Config" (configure) mode if necessary (Fig. 2).


1. Press the CONFIG button on the touch screen (Fig. 3).
2. This screen will display (Fig. 4):
3. Use left or right arrow (Fig. 4) to scroll through the options to desired function title.
4. Once the proper title for desired function is on the screen press the SELECT button (Fig. 4).
5. Repeat steps for all functions to be used. For any function that will NOT be used, select the NONE title option then press SELECT.

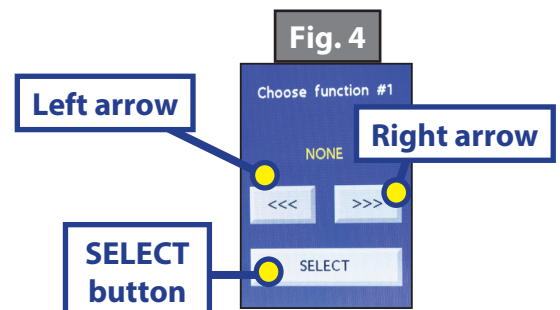

ELECTRONICS


6. After all the functions have been assigned a "title", the next screen will ask: Configure Leveler? Select NO at this time (Fig. 5).

Fig. 5

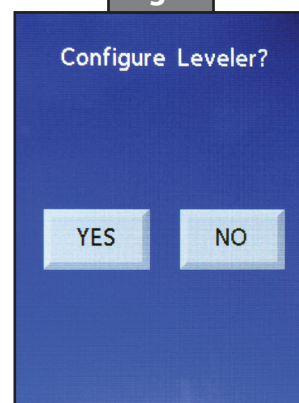

7. The next screen will show all the assigned titles for all the functions (Fig. 6).

Fig. 6

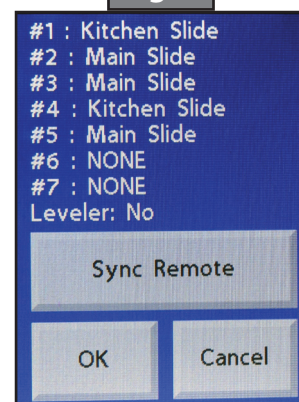

8. Review and, if correct, press and hold the black button on the multi-function board AND then press the "Sync Remote" button on the touch screen. The multi-function board will "click" when the function titles have been transmitted properly (Fig. 7).


Fig. 7



Select and assign fuses to functions

1. The next screen will ask:
 - A. Config Fuses? Press "YES" (Fig. 8).

Fig. 8

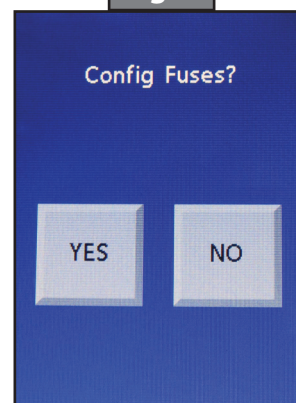


2. This screen will then display (Fig. 9):
3. Select fuse desired for Function #1.
4. Use arrow left or arrow right to select desired fuse position for Function #1. Once the proper fuse position for Function #1 is on the screen press the SELECT button. Repeat steps to assign fuse positions for all functions used.

Fig. 9



5. The next screen will show all the assigned fuse positions for all the functions (Fig. 10). Review and, if correct, press and hold the black button on the multi-function board, then press the "Send Configuration" button on the touch screen. The multi-function board will "Double-Click" when the fuse positions have been transmitted properly (Fig. 7, page 2).

Fig. 10

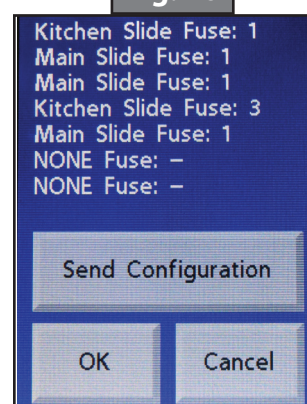

NOTE: To re-enter configure mode, turn off remote control by holding the Home button. Press the Home button to turn remote back on, then press and release the Home button five (5) times to enter the "Config" mode (Fig. 2)