

**INSTALLER INSTRUCTIONS FOR FACTORY INSTALLATION
OF
NO-FUSS FLUSH® WASTEHOLDING TANK FLUSHING SYSTEM PART # 517W**
(TEI Listing No. 16910)

1. Drill 1" hole on side or end of wasteholding tank, no more than 2" from the top near center.
2. Insert No-Fuss Flush® in hole in "top" position as stamped on flusher and drill $\frac{1}{8}$ " lead holes in tank.
3. Apply clear silicone sealer (**do not substitute**) completely covering inside of flange (about $\frac{3}{16}$ " thick). Fasten with #8 - $\frac{1}{2}$ " stainless steel screws supplied. Let silicone cure, following manufacturers' instructions on tube, before testing.
4. Install vacuum breaker a minimum of 6" above the highest flood level rim of any fixture connected to the wasteholding tank (see drawing). Install check valve horizontally immediately on the discharge side of the vacuum breaker. Both valves are directional. **DO NOT** connect any other check valves (other than enclosed) to this system. *Do not use a water inlet with check valve.*
5. Test Flusher system for leaks with a minimum water pressure of 40 PSI.
6. Attach enclosed *Caution* sticker on or near the water inlet to this system.

NOTE: If it is necessary to add any parts to this system, the parts shall be the equivalent of and installed in accordance with IAPMO TSC 27.

Manufactured by
LAKEVIEW RV SUPPLY, INC.
(512) 261-8000

NO-FUSS-FLUSH®

#517W

WASTEHOLDING TANK
FLUSHING SYSTEM

PART#

①	FILL INLET	
②	CHECK VALVE	#2500
③	ELBOW	
④	VACUUM BREAKER	#288A
⑤	$\frac{1}{2}$ " IPS (LISTED PIPING)	
⑥	"NO-FUSS FLUSH"®	#336

PACKAGE INCLUDES:

#2, #4, #6 plus 3 stainless steel screws, caution sticker, user and installer instructions.

