


MORryde BED LIFT MANUAL OVERRIDE



1 Remove clevis pin from the foot end connection of the actuator (circled above) to release the actuator from the frame. Once the actuator is dis-connected the frame can be moved manually. This is most easily achieved by lifting the head section.

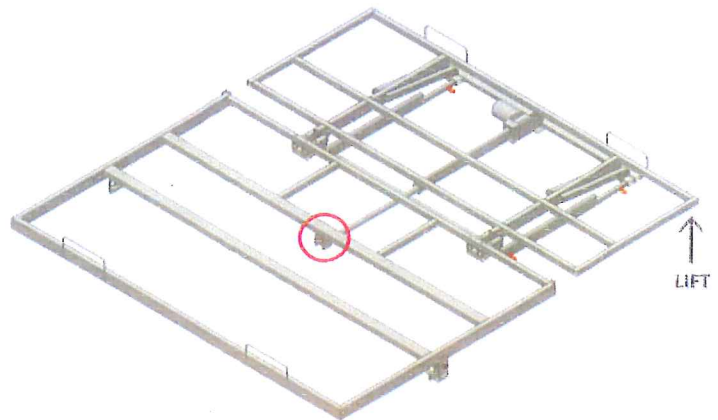

CAUTION: The frame will fall back to the flat position if not supported.

2 With the bed in the full upright position a hole in the frame will align with a hole in the frame support roller. Insert the clevis pin used for the actuator connection through the roller and frame tube to lock the frame in the up position. Be sure to use the cotter pin with the clevis pin to keep the pin in place.

Note: Roller on either side can be used.

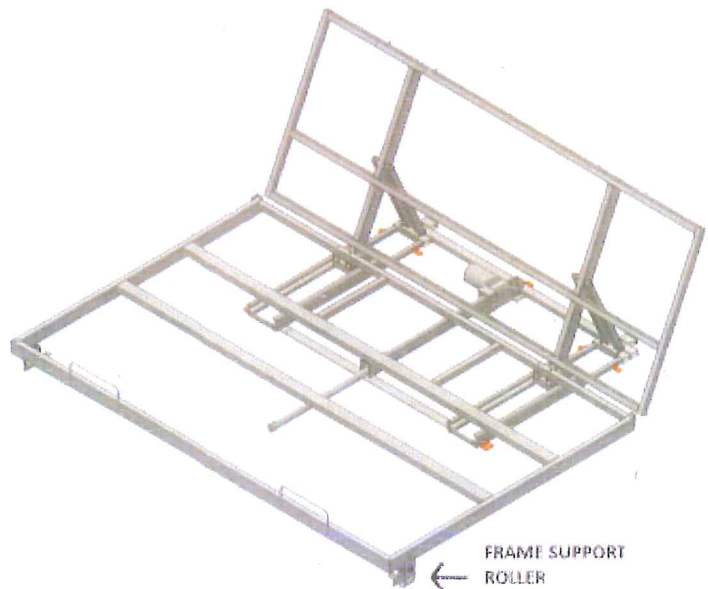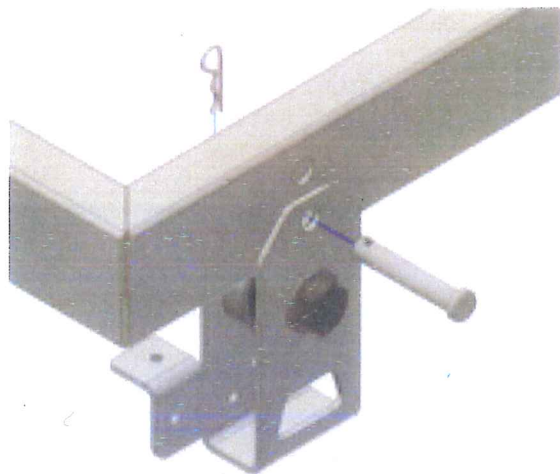

MORryde International, Inc.

www.MORryde.com

574.293.1581